




RockJock® Professional OffRoad Products presents:
CE-9807FTBK Front Track Bar Relocator Kit
Installation Instructions

Fits

Fits: Front of '07 & up Jeep JK Wranglers


Kit Includes

- 1) CE-7120F-TB1 - Front Track Bar Relocator Bracket Inner
- 1) CE-7120F-TB2 - Front Track Bar Relocator Bracket Outer
- 1) CE-9807FTBS1 - Spacer (large)
- 1) CE-9807FTBS2 - Spacer (small)
- 2) EE-3816CH5 - 3/8-24 x 1" Bolts
- 1) EE-3848CH5 - 3/8-24 x 3" Bolt
- 6) EE-37WSAEH - 3/8 Washers
- 3) EE-38ALNC - 3/8 Stover Nuts
- 1) EE-5752CH5 - 9/16-18 x 3.25" Bolt
- 1) EE-57ALNCZY - 9/16-18 Stover Nut
- 2) EE-56WUSSH - 9/16 Washers

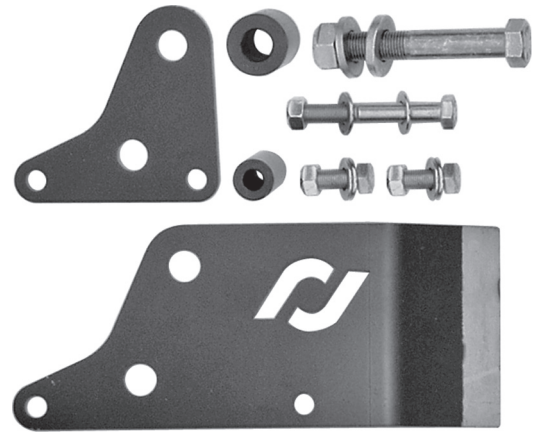

Instructions

- 1) Remove the factory track bar.
- 2) Remove paint from the front of the passenger side upper control arm bracket.
- 3) Install front track bar relocator brackets, using the supplied hardware.
 - Install large bracket inside the factory track bar bracket using 3/8"-24 x 1" bolt on the lower right hole.
 - Install small bracket on the front of the factory bracket using 3/8"-24 x 1" bolt on the lower right hole.
 - Insert the small spacer between the rear bracket and the factory bracket. Use 3/8"-24 x 3" bolt on the lower left hole and bolt through front bracket, small spacer, rear bracket and factory bracket.
 - Next insert large spacer in the same manner as the small one and bolt through with 9/16-18 x 3.25" bolt.
- 4) Tighten the lower right bolt on the back bracket.
- 5) Install factory track bar using factory hardware and tighten.
- 6) Tighten the other hardware at this time.
- 7) Weld the rear bracket to the factory upper control arm. It may be necessary to fit bracket by grinding prior to welding. In some cases a clamp may be needed to pull bracket against the upper arm mount.
- 8) Paint bracket using your choice of paint.

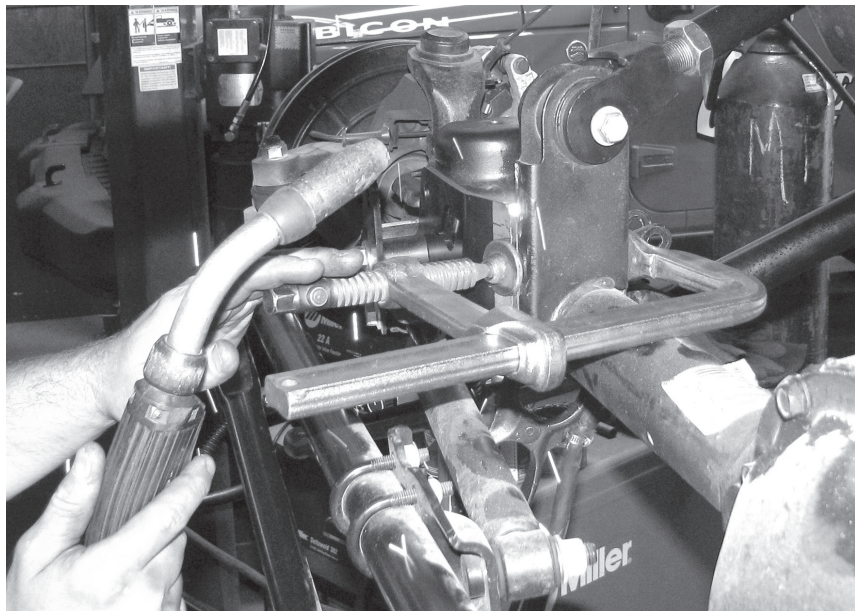

Currie Enterprises / RockJock Professional Off Road Products
 382 N. Smith Ave., Corona, Ca. 92880
 Ph (714) 528-6957 - F (951) 549-0267
 www.rockjock4x4.com

